

Lovato
electric

LOVATO ELECTRIC S.P.A.

24020 GORLE (BERGAMO) ITALIA
VIA DON E. MAZZA, 12
TEL. 035 4282111
FAX (Nazionale): 035 4282200
FAX (International): +39 035 4282400
E-mail info@LovatoElectric.com
Web www.LovatoElectric.com




RF38...

- I** RELÈ TERMICO
- GB** THERMAL OVERLOAD RELAY
- D** ÜBERSTROMRELAIS
- F** RELAIS THERMIQUE
- E** RELÈ TÉRMICO
- P** RELÈ TÉRMICO
- CN** 热继电器




<p>A</p>	<p>1</p>	<p>2</p>	<p>3</p>
<p>B</p>	<p>1</p>	<p>2</p>	<p>3</p>
<p>TEST</p>		<p>RESET</p>	

MAN/AUTO

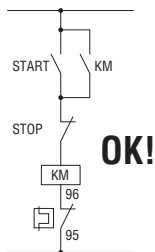


OK!


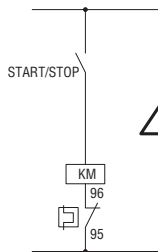


Pericoloso!
Dangerous!
Gefahr!
Dangereux!
Peligro!
Perigo!
危險

Il riarmo automatico può essere pericoloso.
Automatic resetting can be dangerous.
Die automatische Rücksetzung kann gefährlich sein.
Réarmement automatique peut être dangereux.
El reinicio automático puede ser peligroso.
O rearmamento automático pode ser peritoso.
自动的复位可能引发危险

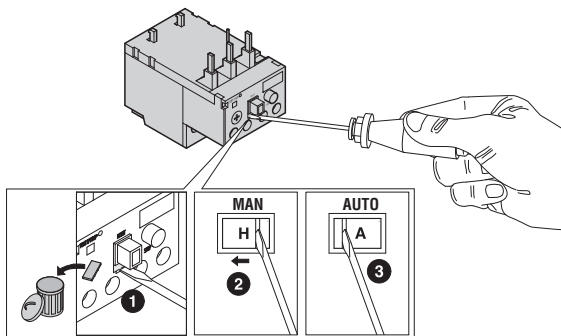

RFX38 04

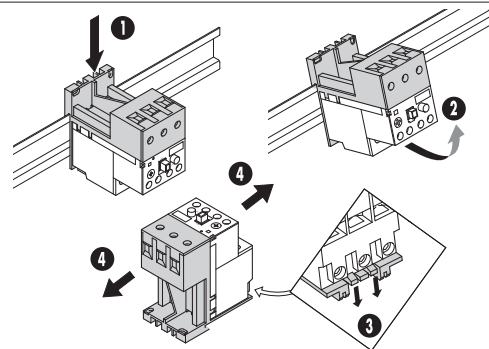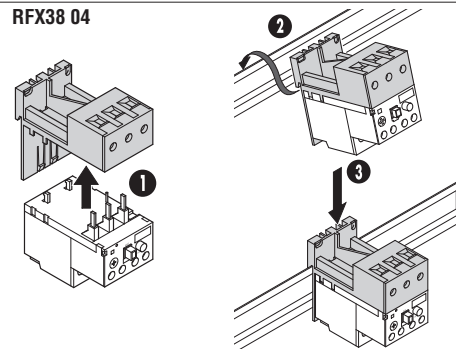

RF38...			
	 Phillips 2	 Ø 6mm	Max 2x2.5mm ² Max 2x14 AWG
	 0.8...1.5Nm		Max 2x2.5mm ² Max 2x14 AWG
	 Phillips 2	 Ø 6mm	Max 2x10mm ² Max 2x8 AWG
	 2...2.5Nm		Max 2x6mm ² Max 2x8 AWG

RFX38 04			
	 Phillips 2	 Ø 6mm	Max 1x10mm ² Max 1x8 AWG
	 2...2.5Nm		Max 1x6mm ² Max 1x8 AWG